



**EXT REFERENCE INPUT**

UNIPOLAR (>=0) OR AC COUPLED ONLY!  
 FERRITE CORE MUST BE USED ON INPUT CABLE.  
 Steward p.n. 28A0350-0B2 for RG316DS cable.

Connect to chassis via mounting post.

**INT/EXT REF SWITCH**

**POWER**

**REFERENCE OUTPUT**

**REFERENCE MONITOR**

**ALTERNATE PARTS**

Title OCXO_BUFFER		
Size C	Document Number 6045-205	Rev <Rev Code>
Date Wednesday, October 25, 2006	Sheet 1	of 1